

# EMslim manual



When operating this product, please read the manual carefully first

## Preface

First of all, we would like to express our heartfelt thanks to the customers who purchase our instruments. This manual is for customers to use the instrument better, To use the instrument correctly, Prevent damage to operations and users, To protect the instrument from damage, To avoid unnecessary loss of property, Please read the instructions carefully before using.

The Company is responsible for the safety and reliability of the instrument only if: The assembly operation, reloading, improvement and maintenance are carried out by the personnel approved by our company, The electrical equipment connected to this instrument conforms to the national standard, and the use of this instrument is carried out in accordance with the operation instructions.

This is a life beauty instrument.

If the beauty agency using this instrument can not operate the instrument formally, it may cause the failure of the instrument function and may endanger the personal health. The company will provide the circuit diagram at the request of the user, and also list the calibration method and other information to help the user to repair the equipment part of the company classified by the by qualified technicians.

This product must be used in strict accordance with the method of use in this manual, the misuse of methods other than the manual caused by all the consequences of their own responsibility, the company does not bear any responsibility.

The Company does not provide any form of security, including (but not limited to) real and suitable security against it for a particular purpose. The Company shall not be liable for any incidental or indirect damage caused by the error contained in this information or by the actual performance and use of this manual. This user manual contains all the basic information of this instrument. This is the starting point for new users to start using this instrument, because it gives a basic introduction to the system, explains how it works, introduces the installation of this instrument and various operating methods, can be through the directory to find the required information.

this manual contains proprietary information protected by patent law. All rights reserved. No part of this manual shall be photographed, copied, reproduced or translated into other languages without the written consent of the Company. The contents of the manual can be changed without notice to the user.

# Directory

<b>1. Introduction of Instrument.....</b>	<b>1</b>
1.1 Instrument function.....	1
1.2 Instrument parameters.....	1
1.3 Appearance of instrument.....	1
<b>2.Points for attention.....</b>	<b>6</b>
2.1 Precautions before use.....	6
2.2 Contraindications.....	6
2.3 Attention in Customer Use.....	6
<b>3. Operation process of the instrument interface.....</b>	<b>7</b>
3.1 Start interface operation process.....	7
3.2 Handle independent working interface operation.....	7
3.3 Setting interface.....	11
<b>4.Maintenance and repair.....</b>	<b>15</b>
4.1 Maintenance.....	15
4.2 repair.....	15
<b>5.Common Troubleshooting Methods.....</b>	<b>16</b>
<b>6.Manufacturer's liability.....</b>	<b>16</b>
<b>7.Storage and Transportation.....</b>	<b>17</b>
<b>8.Duration of use.....</b>	<b>17</b>
<b>9.List of accessories.....</b>	<b>17</b>
<b>10.Warranty card .....</b>	<b>18</b>

## 1.1 Instrument principles

By using HI-EMT( high energy focused electromagnetic wave) technology to expand and contract muscles, limit training, and deep remodeling of muscle internal structure, That is, the growth of myofibrils (muscle enlargement) and the production of new protein chains and muscle fibers (muscle hyperplasia) to train and increase muscle density and volume.

HI-EMT 100% limit muscle contraction of the technology can lead to a large amount of fat decomposition, fatty acids from the decomposition of triglyceride outflow, a large amount of accumulation in adipocytes. Fat acidity is too high, fat cells apoptosis, in a few weeks by the body's normal metabolism out of the body.

 
RF: Heat uniformly for the treatment area, so that the subcutaneous fat quickly reaches the treatment temperature, achieving the dual effects of firming and dissolving fat.

## 1.2 Instrument parameters


Name	Parameters
input power	220V 50HZ
Output powe	2800W
Frequency	5-100Hz
screen size	18 寸
Machine colour	Grey

## 1.3 Instrument appearance Front of instrument


**Note: The handle can only be used by the original machine and cannot be cross-used.**

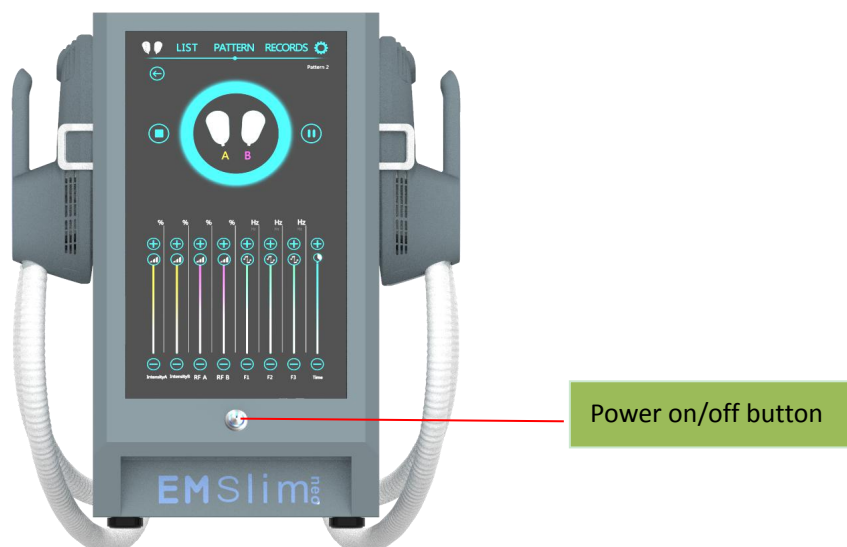

Rear view of the instrument

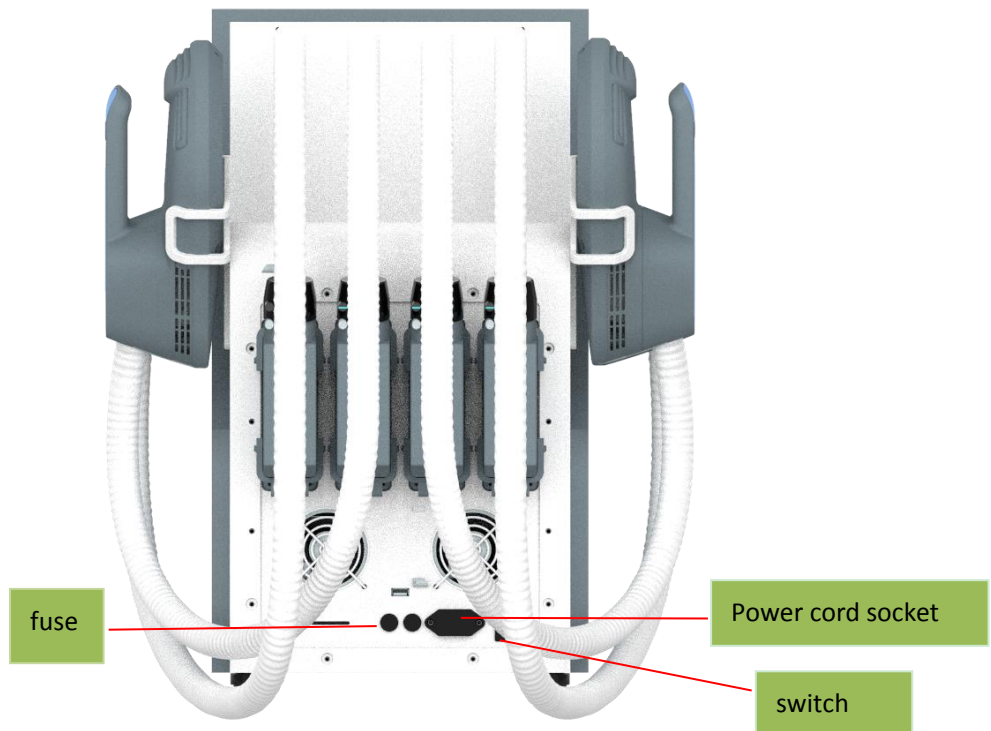 

Instrument side view

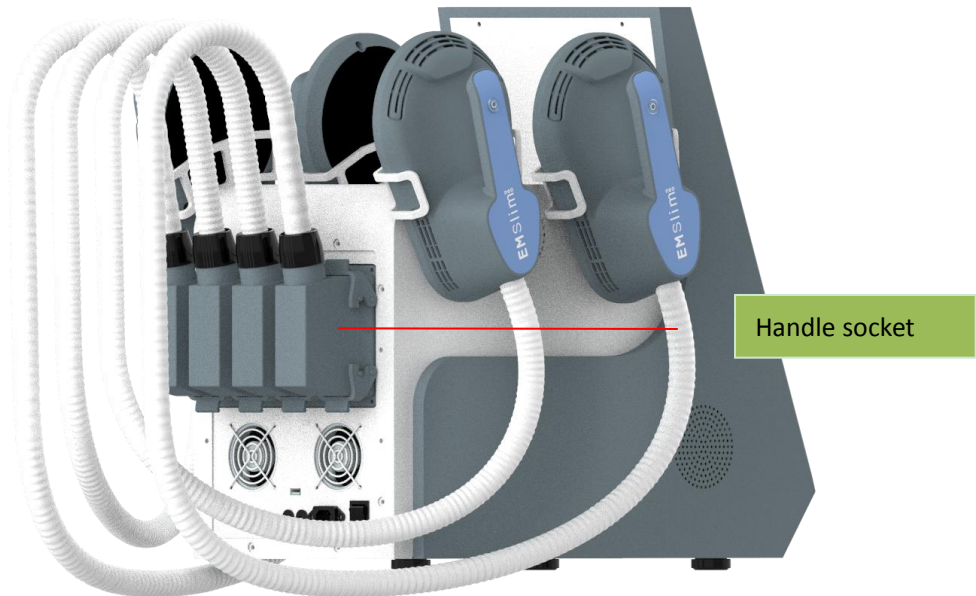 

## 2、Matters needing attention

### 3、2.1 precautions before use

- Don't be full at least one hour after meals
- Before using the instrument, please remove any metal jewelry you wear
- Before starting the operation, first touch the probe to the skin vertically, then turn on the switch of the main unit, adjust the operation mode energy to the lowest, and then increase the energy sequentially according to the user's skin bearing capacity;
- It is forbidden to eat or drink during the operation, try to eat after one hour

### 2.2 contraindications

 
- Persons with wounds on the skin, or avoid the wounds;
- Patients with heart disease (such as arrhythmia), especially those with a pacemaker;
- Cancer patients;
- Patients with infectious diseases;
- Pregnant women, breastfeeding, menstrual period;
- Major surgery patients and diabetic patients;
- There is any metal in the body;
- Persons suffering from cerebrovascular diseases (stroke patients)

### 2.3 Precautions for customers during and after use


- After use, the user should add water in time;
- Do not overeating, arrange food and sleep reasonably;
- Be sure to strengthen moisturizing and sun protection after treatment;
- Quit spicy food;
- Please refrain from hot springs and saunas temporarily within three days;

### 3、 Operation process of the instrument interface

#### 3.1 Start interface

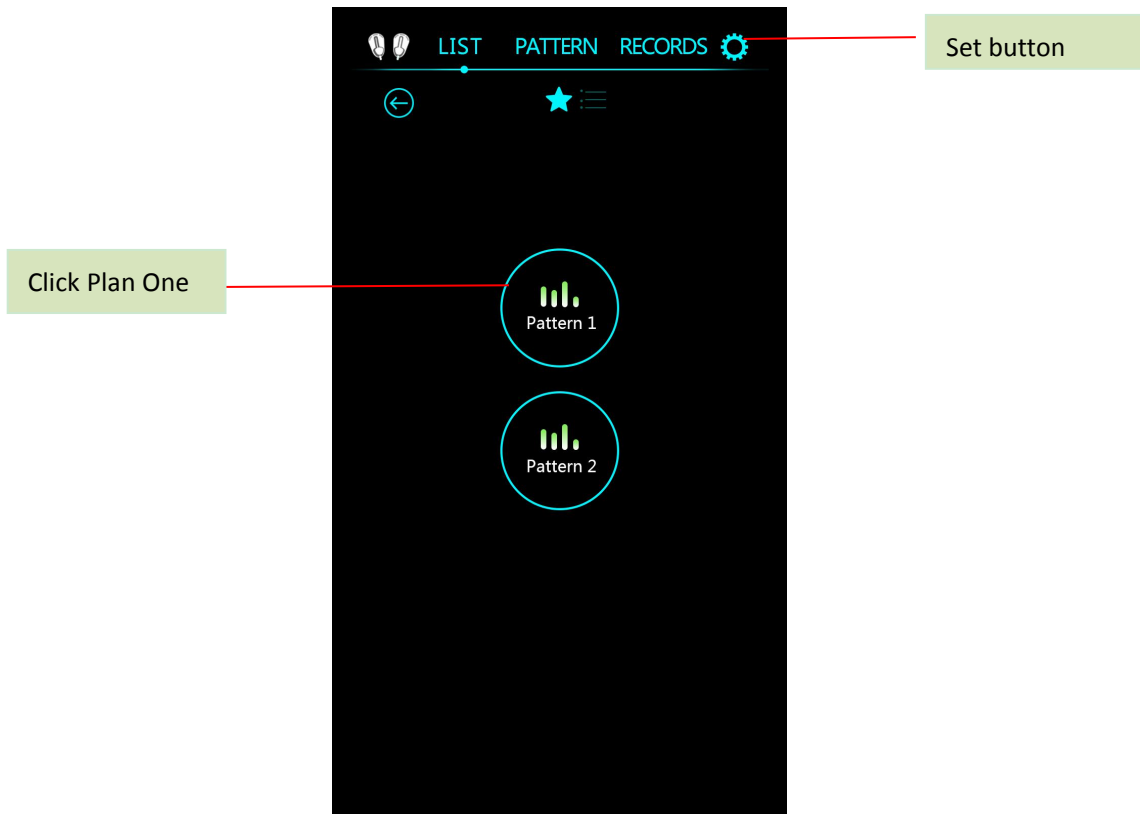

 **Note: 1.** The operation interface of Scheme 1 is as follows (Before operation, please take out the handle from the handle frame, and fix the handle on the part required by the customer with a belt)

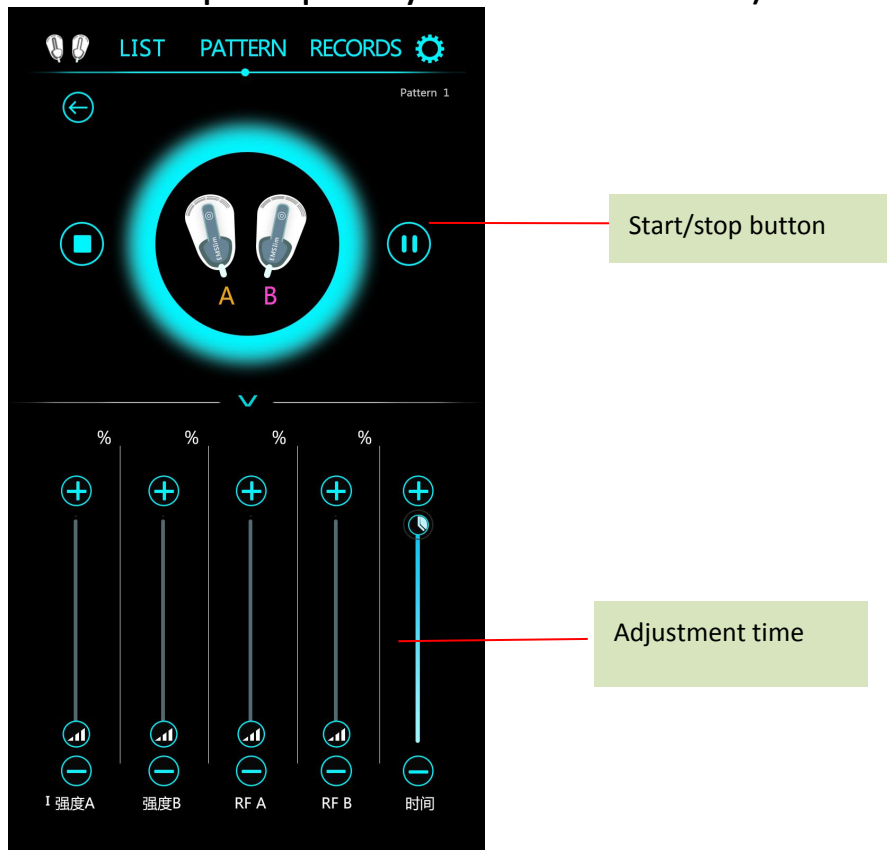


**2.** Enter the program 1 interface to adjust the handle operation time according to customer needs, and then click the start/stop button to proceed to the next step.

## EMslim manual




 3. Choose according to different genders, ages, and parts (are recommended to choose the buttocks) after the selection is complete, click OK to proceed to the next step.

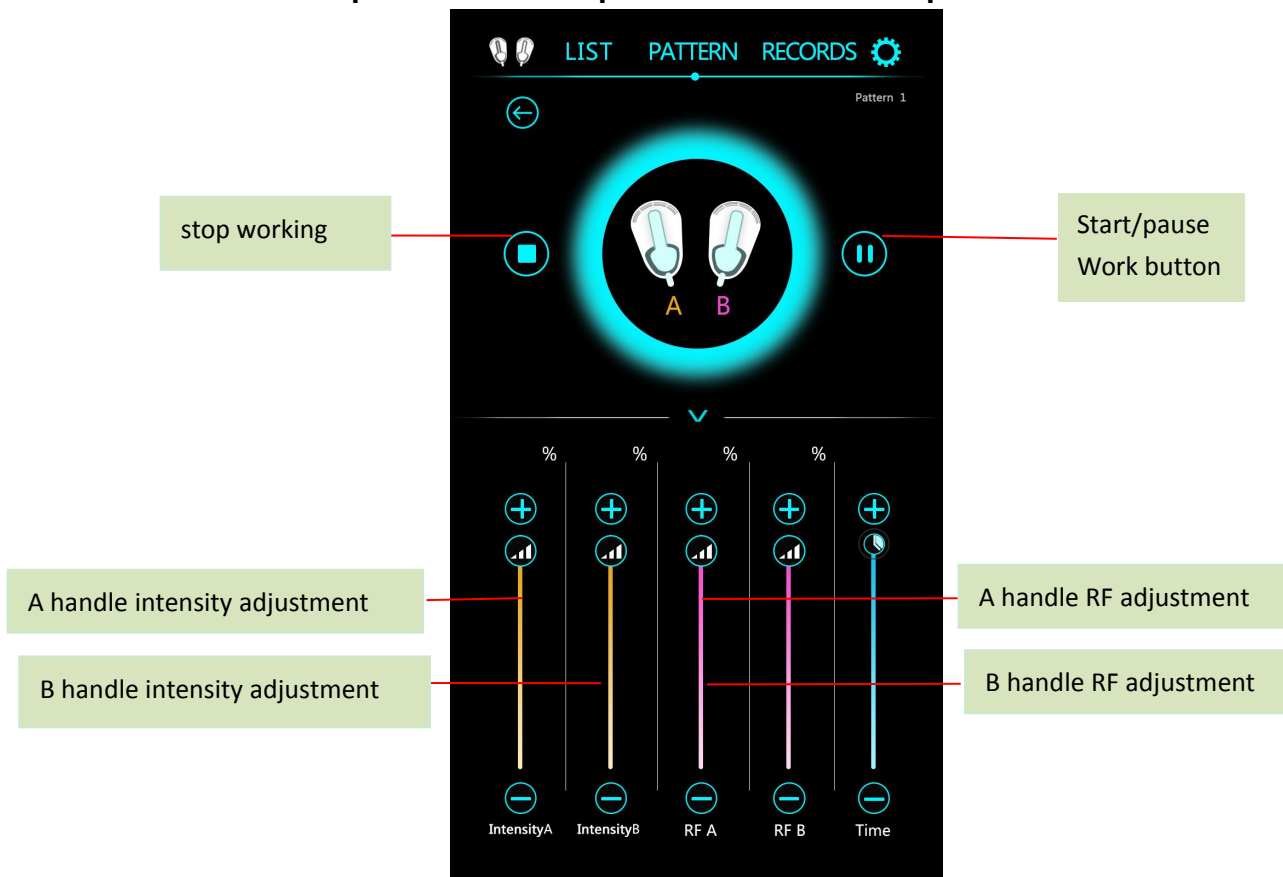


 4. Adjust the corresponding intensity according to different customer needs to start the operation. If the customer requests to pause, you can click the start/pause button to pause the work. After the work is completed, you can directly click the return button to return.



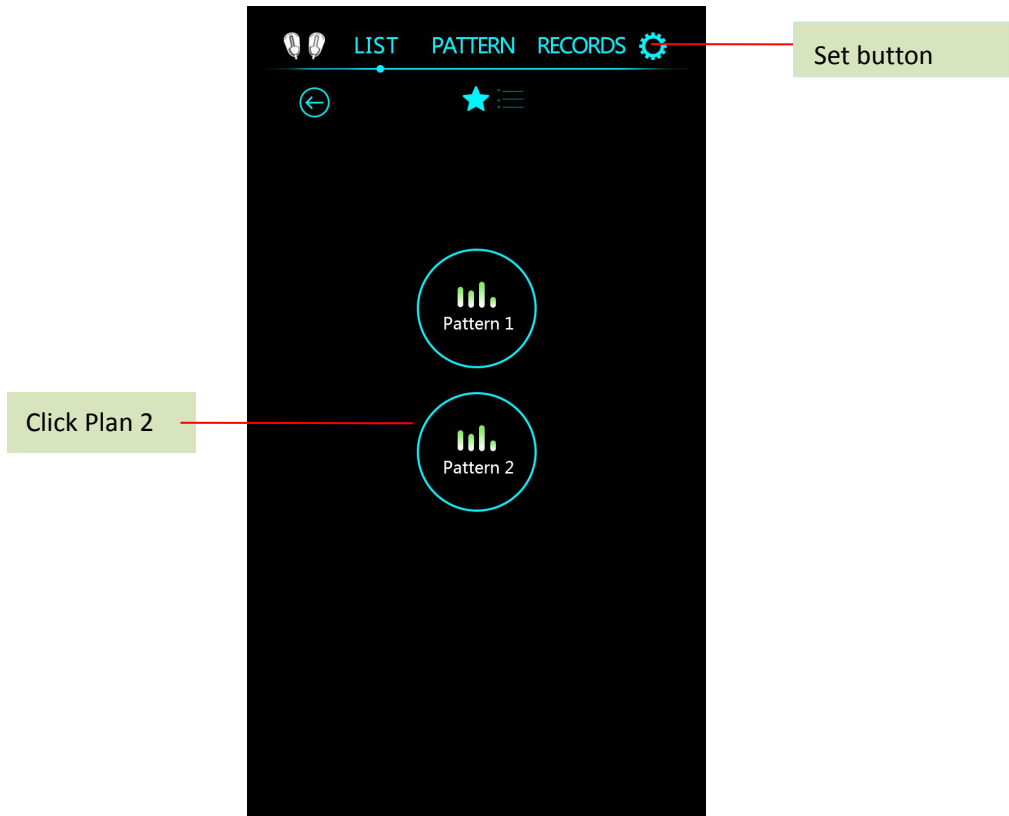

 
1. Mode 2 operation interface is as follows (please take out the handle from the handle holder before operation, and fix the handle on the part required by the customer with a belt)

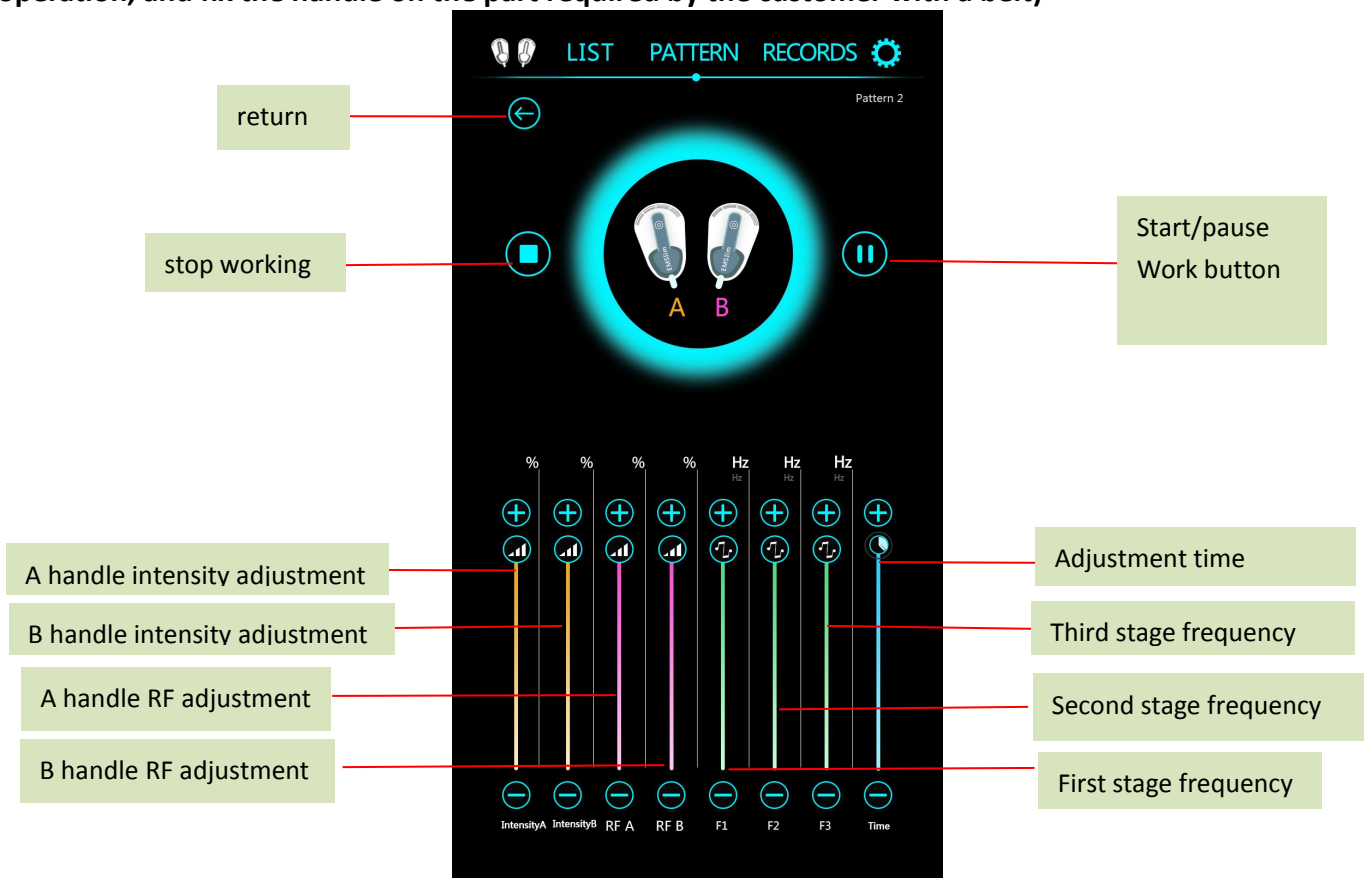

2. Adjust the corresponding intensity/phase frequency/time according to different customer needs. Click the start/pause button to enter the operation work. If the customer requests to pause, you can click the start/pause button to pause the work. After the work is completed, you can directly click the return button to return.


### 3.2 Handle independent working interface operation

 A handle logo

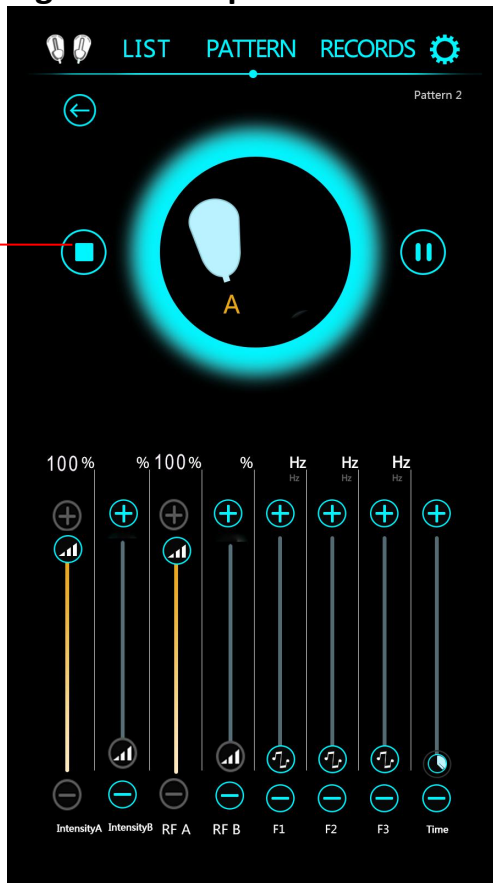

1. The A/B handle can work alone. If you need to stop the B handle when the handle is working, you can click the B handle on the screen (as shown in the figure above, the B handle has stopped working, and the A handle is working again) if you need the B handle Restart work, just light up the B handle logo.


 
B handle logo

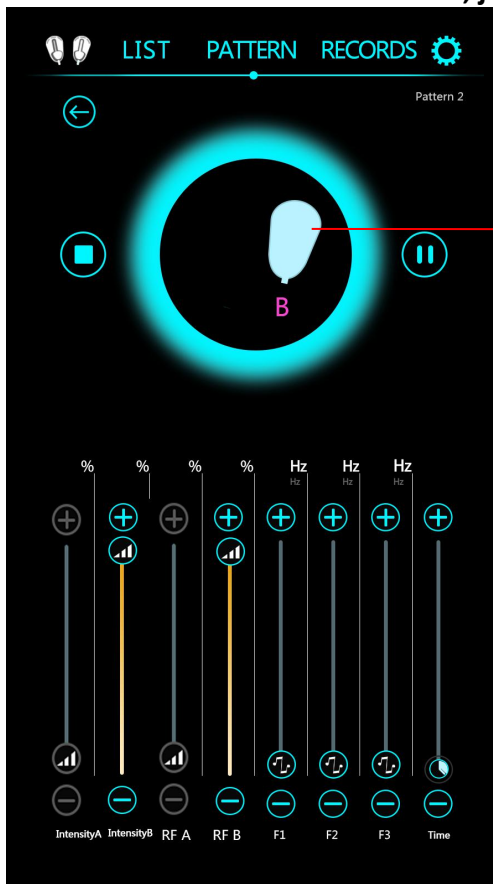


3. The picture above shows that the B handle is working, and the A handle stops working.


- Note:** 1. Align the handle with the operating part and tie it, then press the start button on the screen to start the operation;  
2. Lightly place the handle on the handle holder after use;

### 3.2 Setting interface

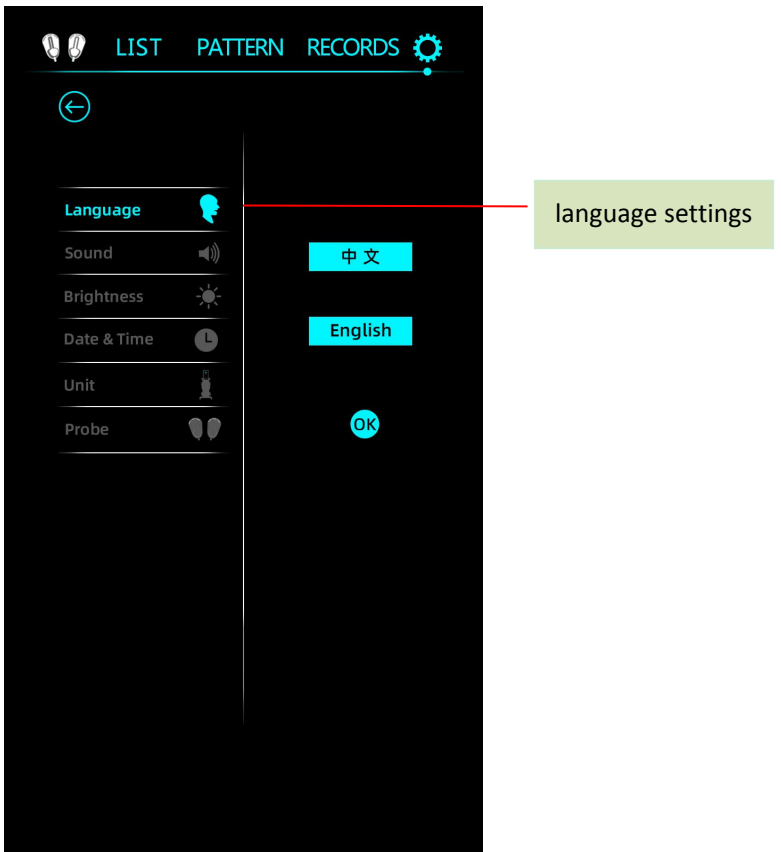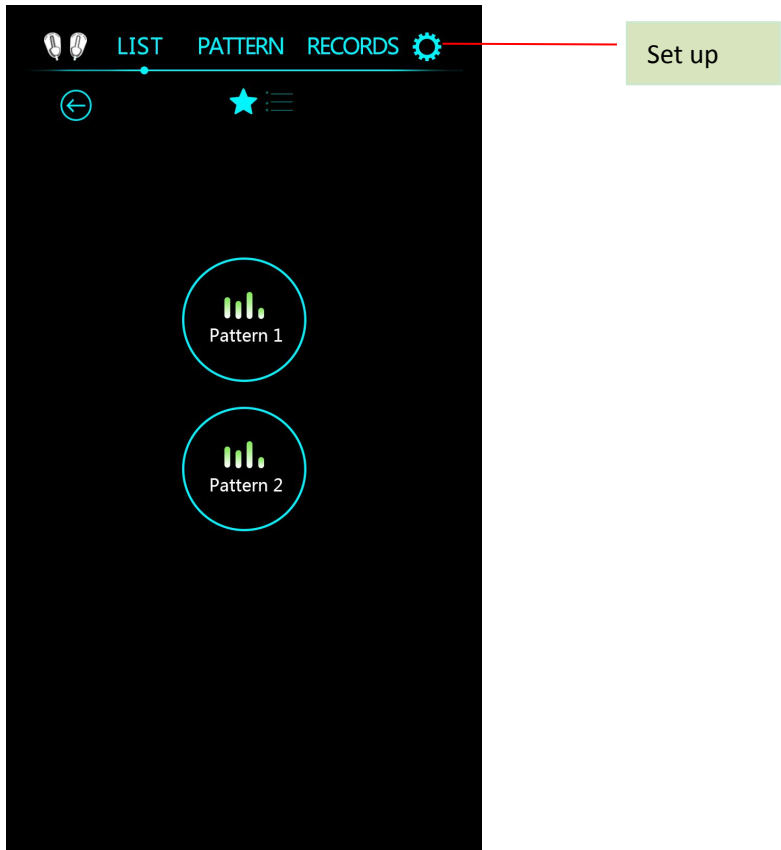  


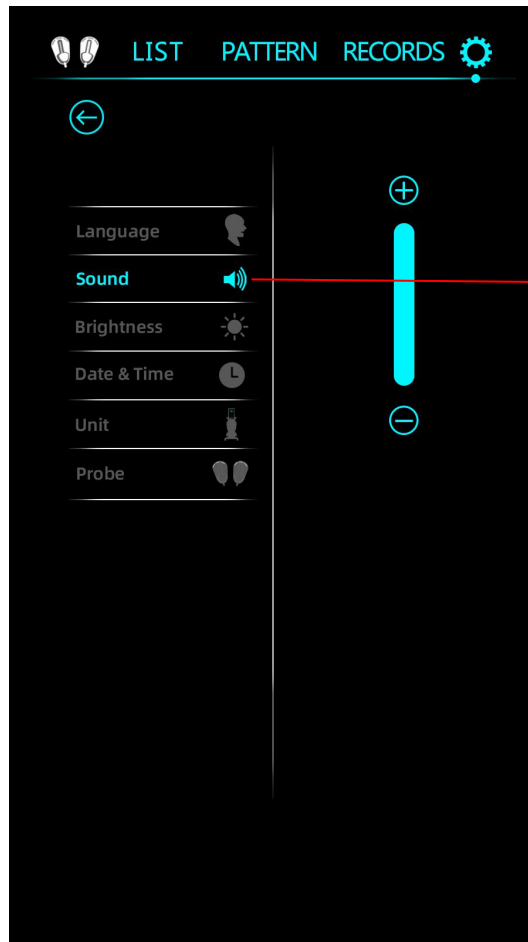 


Volume adjustment

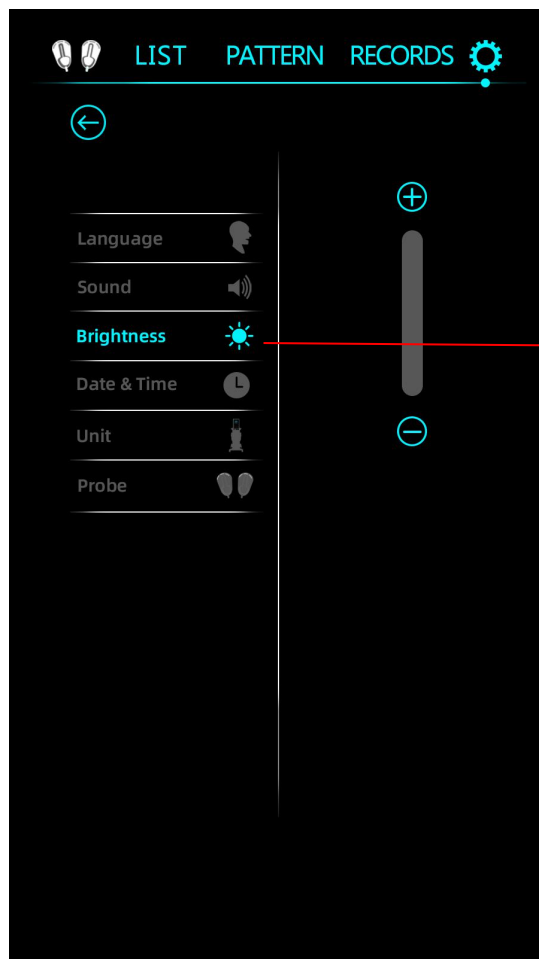 

Dimming

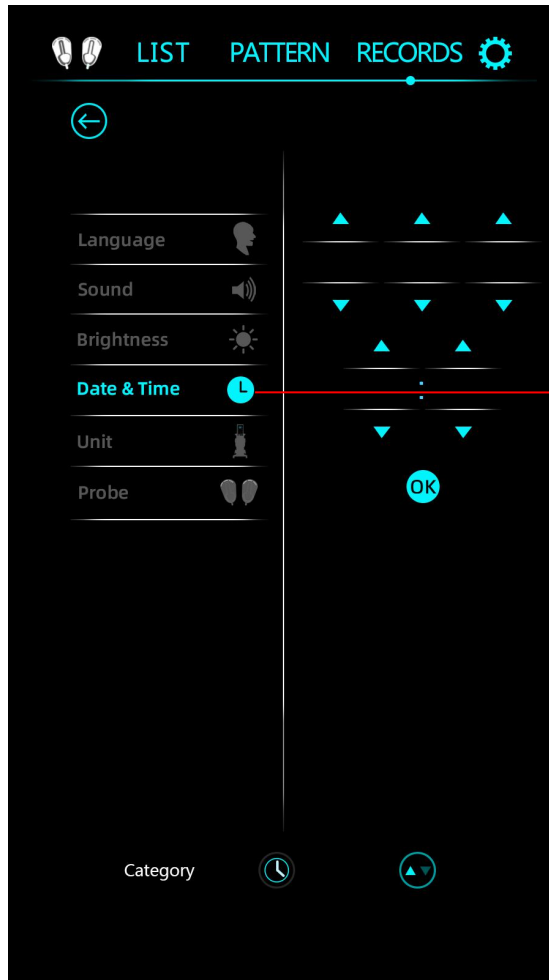 


Set date and time

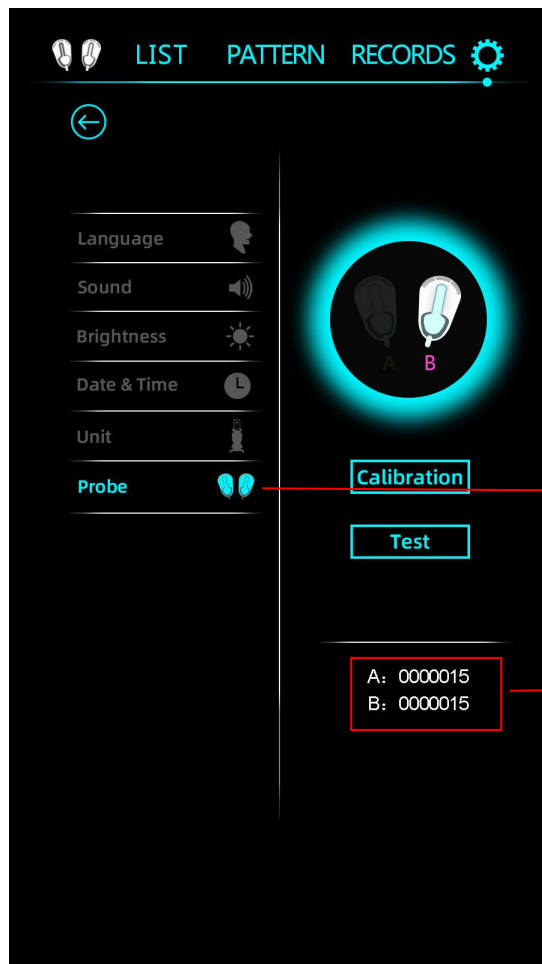 

Calibration probe

 Handle remaining time

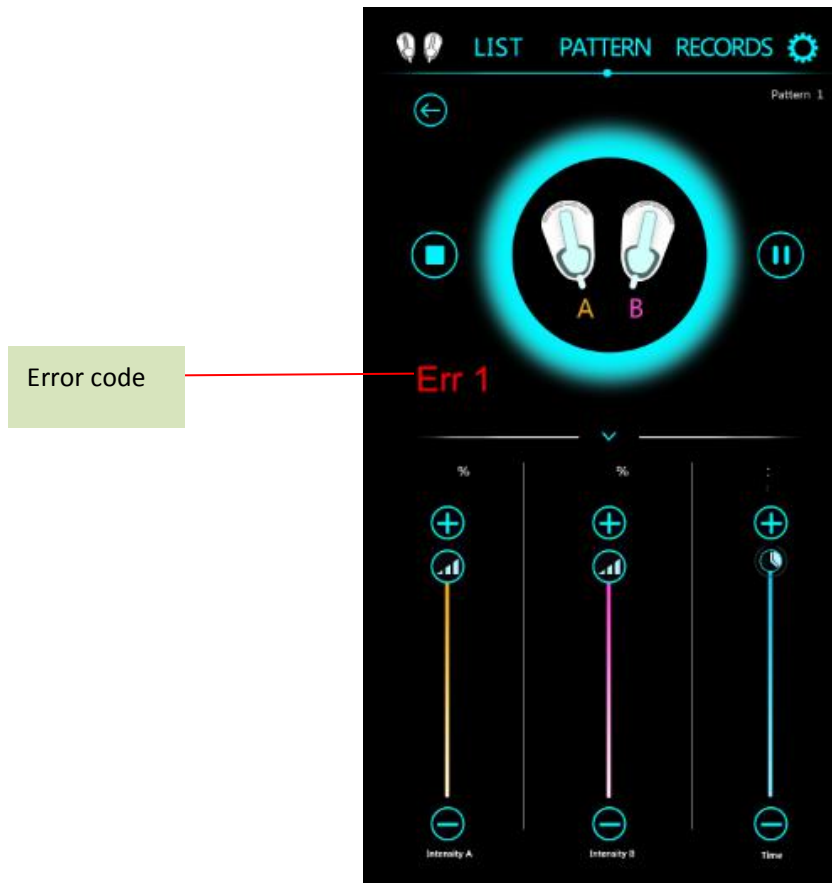

**Error code:**

- 1 The handle is not inserted,**
- 2 The service life is exhausted,**
- 3 The output voltage is too low,**
- 4 Output voltage is too high,**
- 5 Input AC voltage is too low,**
- 6 Input AC voltage is too high,**
- 7 IC card is not inserted, or IC card is damaged,**
- 8 IC card module communication error,**
- 9 The IC card is wrong with the handle,**
- 10 The available time of the IC card is exhausted,**
- 11 The IC card is damaged**
- 13 The two handles are not matched**
- 14 The handle is not paired with the host**
- 15 Error in the host program**
- 16 The controller is not paired with the host**
- 17 The controller version is incorrect**

## Maintenance and repair

### 4.1 maintenance

#### 4.1.1 daily inspection

Management personnel must regularly inspect instruments and components.


Are power outlets reliably connected to the ground.

Please check whether the power cord is damaged before using the instrument, and stop using the instrument if it is damaged.

#### 4.1.2 clean

Clean equipment regularly to ensure cleanliness and good operation of equipment. Wipe the device case with a wet cloth and use soapy water or a neutral cleaner if the device is powered off.

#### 4.1.3 replacement of fuse

 When replacing the fuse, please turn off the power and pull the plug to prevent electric shock.

### 4.2 maintenance

After the purchase of equipment to fill in the warranty card, and send to the manufacturer or agent, to have the warranty effect; From the date of issuing the bill for the purchase of the machine belongs to the company's product quality problems mainframe free warranty for one year (note: with the purchase bill and warranty card warranty; This warranty is limited to the main machine, excluding spare parts and other consumables that need to be replaced periodically. After the warranty period, please contact the manufacturer directly to provide paid after-sales service. Maintenance of the machine must contact with the company's business department or dealers, do not repair with

## 5. Common faults and troubleshooting methods

The fault phenomenon	Cause of occurrence	Exclusion and resolution
Equipment not working	<p>The power plug is not plugged into the socket</p> <p>The power switch is not on</p> <p>Power fuse failure</p>	<p>Check the power supply</p> <p>Check the power switch</p> <p>Replace fuse</p>
Handle not working	<p>The probe is not installed correctly</p> <p>The work head has been damaged</p> <p>The interface behind the instrument is not installed correctly</p>	<p>Check whether the probe is installed correctly</p> <p>Replace working head or silicone ring</p> <p>reinstal</p>

## 6. Manufacturer's liability

The products produced shall conform to the product standards. If the products do not conform to the product standards, the company is responsible for the replacement and return of goods.

The company shall bear the corresponding liability for personal and property damage caused by the manufacturing defects of the products, provided that the company shall not be liable for the following situations:

The purchaser or operation user fails to use the product in accordance with the operation specification in the instruction manual, or fails to use the product in accordance with the safety precautions and warning instructions.

Violation of regulations on transportation, installation, use, maintenance and storage of products, causing damage to products, human life or property.

The company carries out lifelong maintenance and technical service for the products, and will repair for users free of charge any manufacturing quality problems occurred during the stipulated quality assurance period.

When the accessories need to be replaced, the original accessories must be purchased from the company, otherwise the user shall bear the adverse consequences.



## 7. Storage and transportation management

Storage: the equipment should be stored in the original packaging box, in a well-ventilated room, the packing box should be high, the ambient temperature is  $-10^{\circ}\text{C}\sim 40^{\circ}\text{C}$ , the relative humidity is not greater than 93%, not allowed to be placed in the vicinity of harmful gases, flammable, explosive substances and corrosive gases.

Transportation: the instrument under the packing condition is suitable for highway, railway, air and water transportation. In the process of loading, unloading and transportation, it shall prevent violent vibration and impact, and shall not be affected by moisture, and shall not be mixed with inflammable and corrosion-prone substances, mixed transport, specific requirements in accordance with the provisions of the order contract.

## 8. Use period




The warranty period of this instrument is 1 year (except for man-made damage).

The warranty period of spare parts is 3 months (except for man-made damage).

If the instrument beyond the service life continues to use, it shall be tested and approved by the engineer, and the performance of the instrument shall be tested regularly by the engineer in the subsequent use.

Scrapped instruments and accessories that have expired should be disposed of according to local regulations.

## 9. List of accessories

Serial number	name	number	picture	Remarks
1	The host	1 Taiwan		
2	handle	2pcs		
3	Arm	2pcs		Optional

EMslim manual

4	cushion	2pcs		Optional
5	8*80CM 8*90CM 8*100CM The belt	3article		
6	6*70CM Arm strap	2article		Optional
7	The power cord	1article		
8	The instructions	1 this		

**10.Warranty card**

Warranty card the prod:	<input type="text"/>	Type no:	<input type="text"/>
The date of production:	<input type="text"/>	Factory number:	<input type="text"/>

1. the machine (with notes) since the acquisition date within 7 days of occurrence quality problem and appearance is in good condition before change to new one, the host one year warranty (except wearing parts), or other non warranty scope is over the warranty period, can also be responsible for the maintenance and update, need appropriate maintenance fee, if the equipment fails to return to repair, half a year since the date the buyer bear the return freight, sent the seller bear the freight;The freight for more than half a year shall be borne by the buyer.

2. No free warranty service is provided for the failure caused by the following users' personal reasons;

- ① Failure caused by dismantling or refitting the product without authorization;
- ② Malfunction caused by accidental drop
- ③ Failure caused by lack of proper maintenance;
- ④ Failure to follow the correct operation instructions in the operation manual;

EMslim manual

The customer name:  Purchase date:

address:

number:

Dealer name:  Contact name:

address:

number:

Maintenanc:         Send a date:

Records of the warrant Mode

The delivery date:

The cause of the problem:

Customer name:

Contact phone number:

Processing methods and Shipping address:

results:

Records of the Send a date

warranty Mode:

Maintenance:

Calibration date:

Failure cause:  Customer behavior:

phone:

Processing methods Delivery Address:

and resultus: